



Technical Service Information Bulletin

March 6, 2006

Title:

SHORT PIN INSTALLATION DURING PDS

Models:

'07 ES 350

PD019-06

PRE-DELIVERY SERVICE

Introduction To minimize battery discharge during transportation and storage, the Short Pin has been removed at the assembly plant and temporarily stored in the blank space of the Fuse Block in the engine compartment.

During Pre-Delivery Service (PDS), reinstall the Short Pin into its original location.

Applicable Vehicles


- **2007** model year **ES 350** vehicles.

Warranty Information


OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

Installation Procedure

1. Push the core of the clips of the cool air intake duct seal and remove the clips. Remove the cool air intake duct seal.

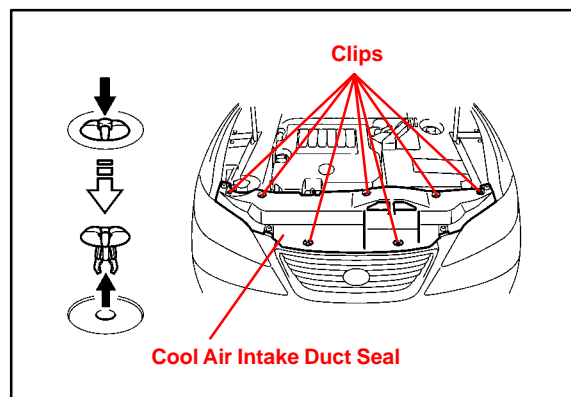


2. Remove the hood hinge cover and push the core of the clips of the engine compartment side cover (left side) and remove the clips. Remove the engine compartment side cover (left side).

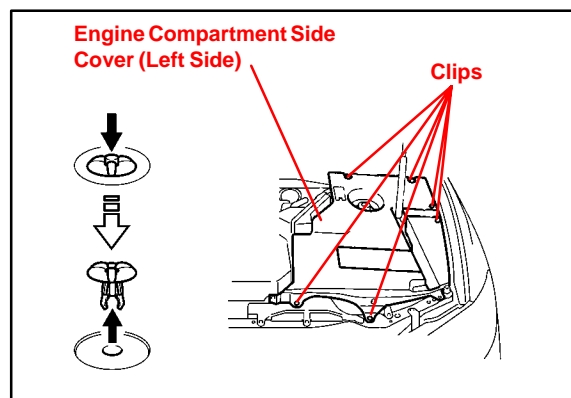

Lexus Supports ASE Certification

**Installation
Procedure**
(Continued)

3. With the engine switch in the “OFF” mode, install the Short Pin in the Fuse Block of the engine compartment.

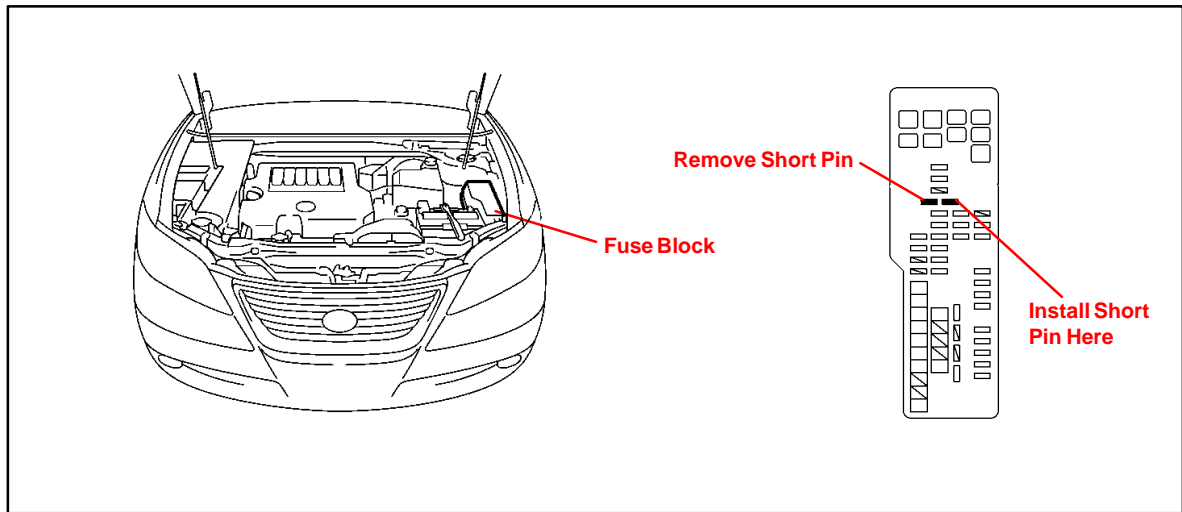**NOTE:**

- The Short Pin does NOT function as a fuse, so install it only in the position shown.
- If the vehicle is stored at the dealership after PDS, disconnect the negative (-) battery terminal to prevent battery discharge.
- If the battery is disconnected, systems requiring initialization may need to be re-initialized.

Installation is the reverse order of removal. When inserting clips, refer to the illustration below.

Installation of Clips